


Radiator Fan and Condenser Fan

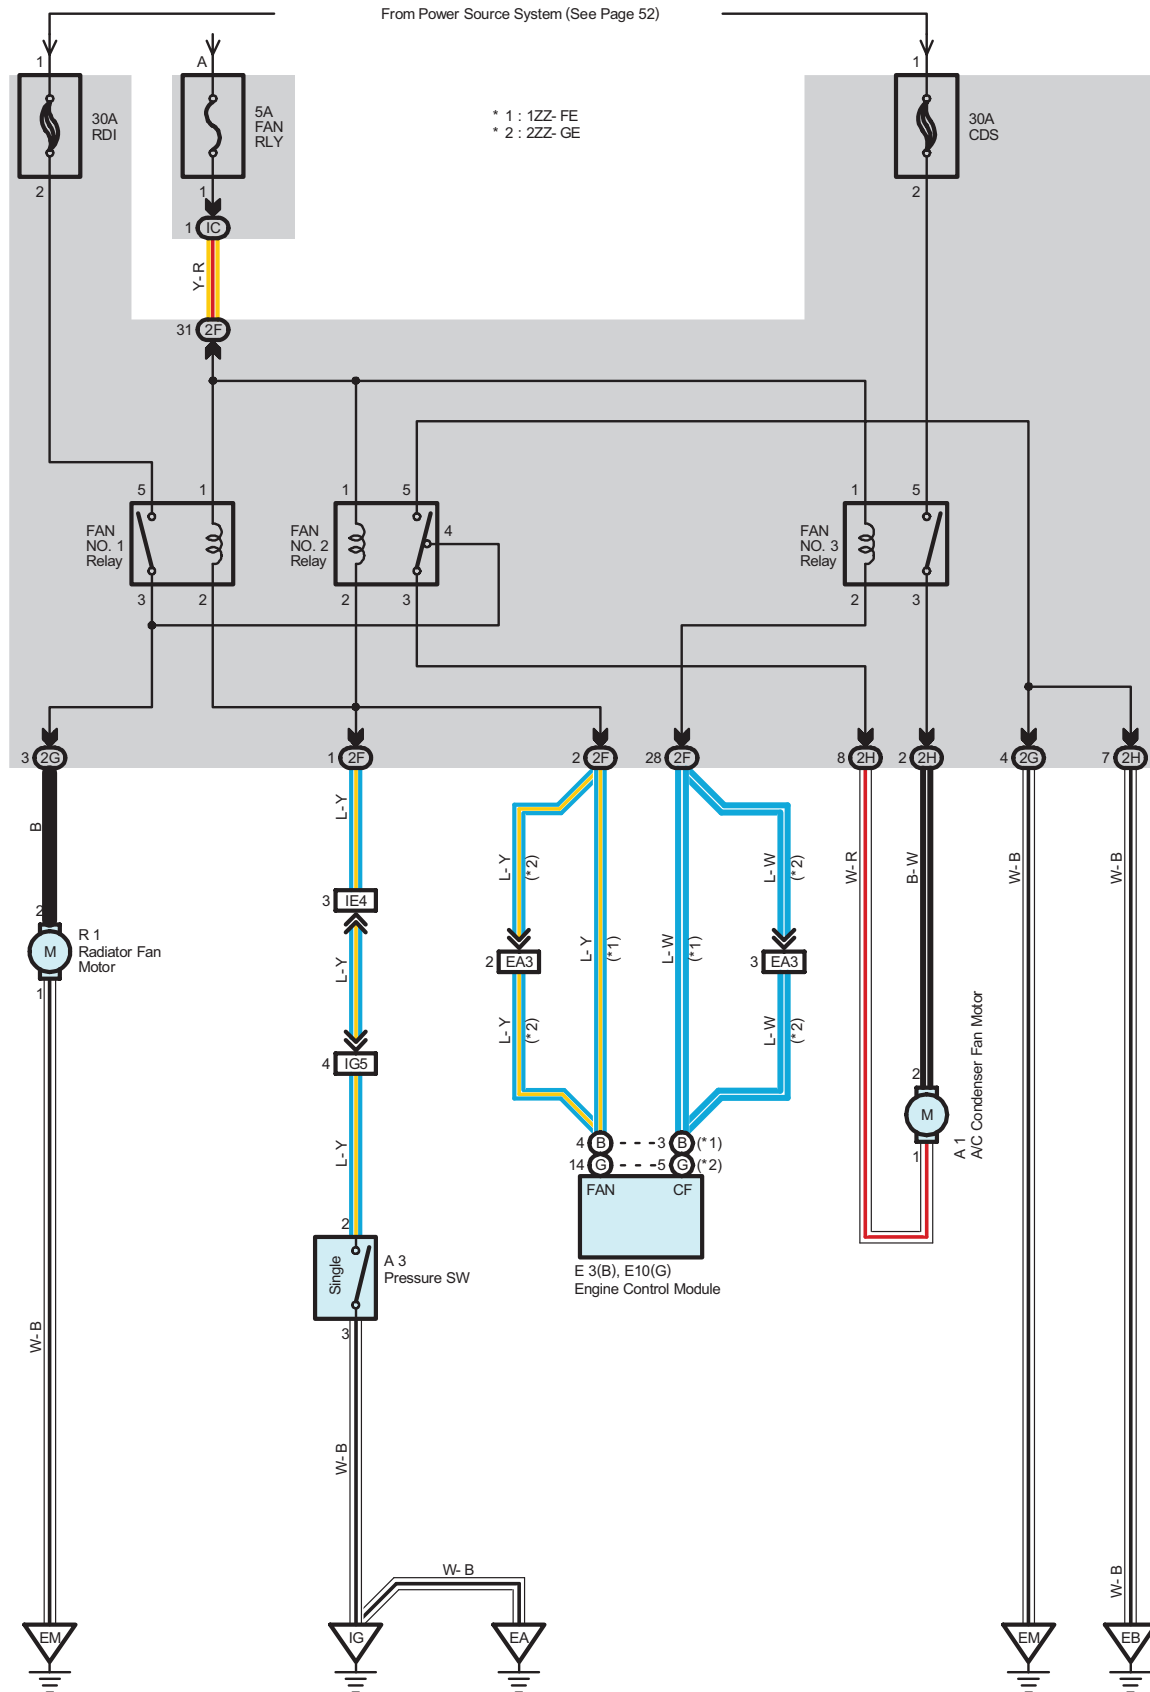

System Outline

Fan motor operation

The fan motor is operated according to the condition of the A/C operation, water temperature, or abnormality in the A/C system.

Service Hints

A3 Pressure SW

3-2 : Open above approx. 15.5 kgf/cm² (220 psi, 1520 kpa)

Close below approx. 12.5 kgf/cm² (178 psi, 1226 kpa)

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A1	32 (1ZZ-FE)	A3		R1	33 (1ZZ-FE)
	34 (2ZZ-GE)	E3	B		35 (2ZZ-GE)
A3	32 (1ZZ-FE)	E10	G		34 (2ZZ-GE)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
IC	25	Engine Room Main Wire and Instrument Panel J/B (Instrument Panel Brace RH)
2F	23	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2G		
2H		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA3	42 (2ZZ-GE)	Engine Wire and Engine Room Main Wire (Inside of Engine Room R/B No.1)
IE4	44	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Brace LH)
IG5	46	Engine Room No.2 Wire and Instrument Panel Wire (Right Kick Panel)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
EA	40 (1ZZ-FE)	Front Right Fender
	42 (2ZZ-GE)	
EB	40 (1ZZ-FE)	Front Left Fender
	42 (2ZZ-GE)	
EM	40 (1ZZ-FE)	Front Left Fender
	42 (2ZZ-GE)	
IG	44	Cowl Side Panel RH