


From Power Source System (See Page 52)

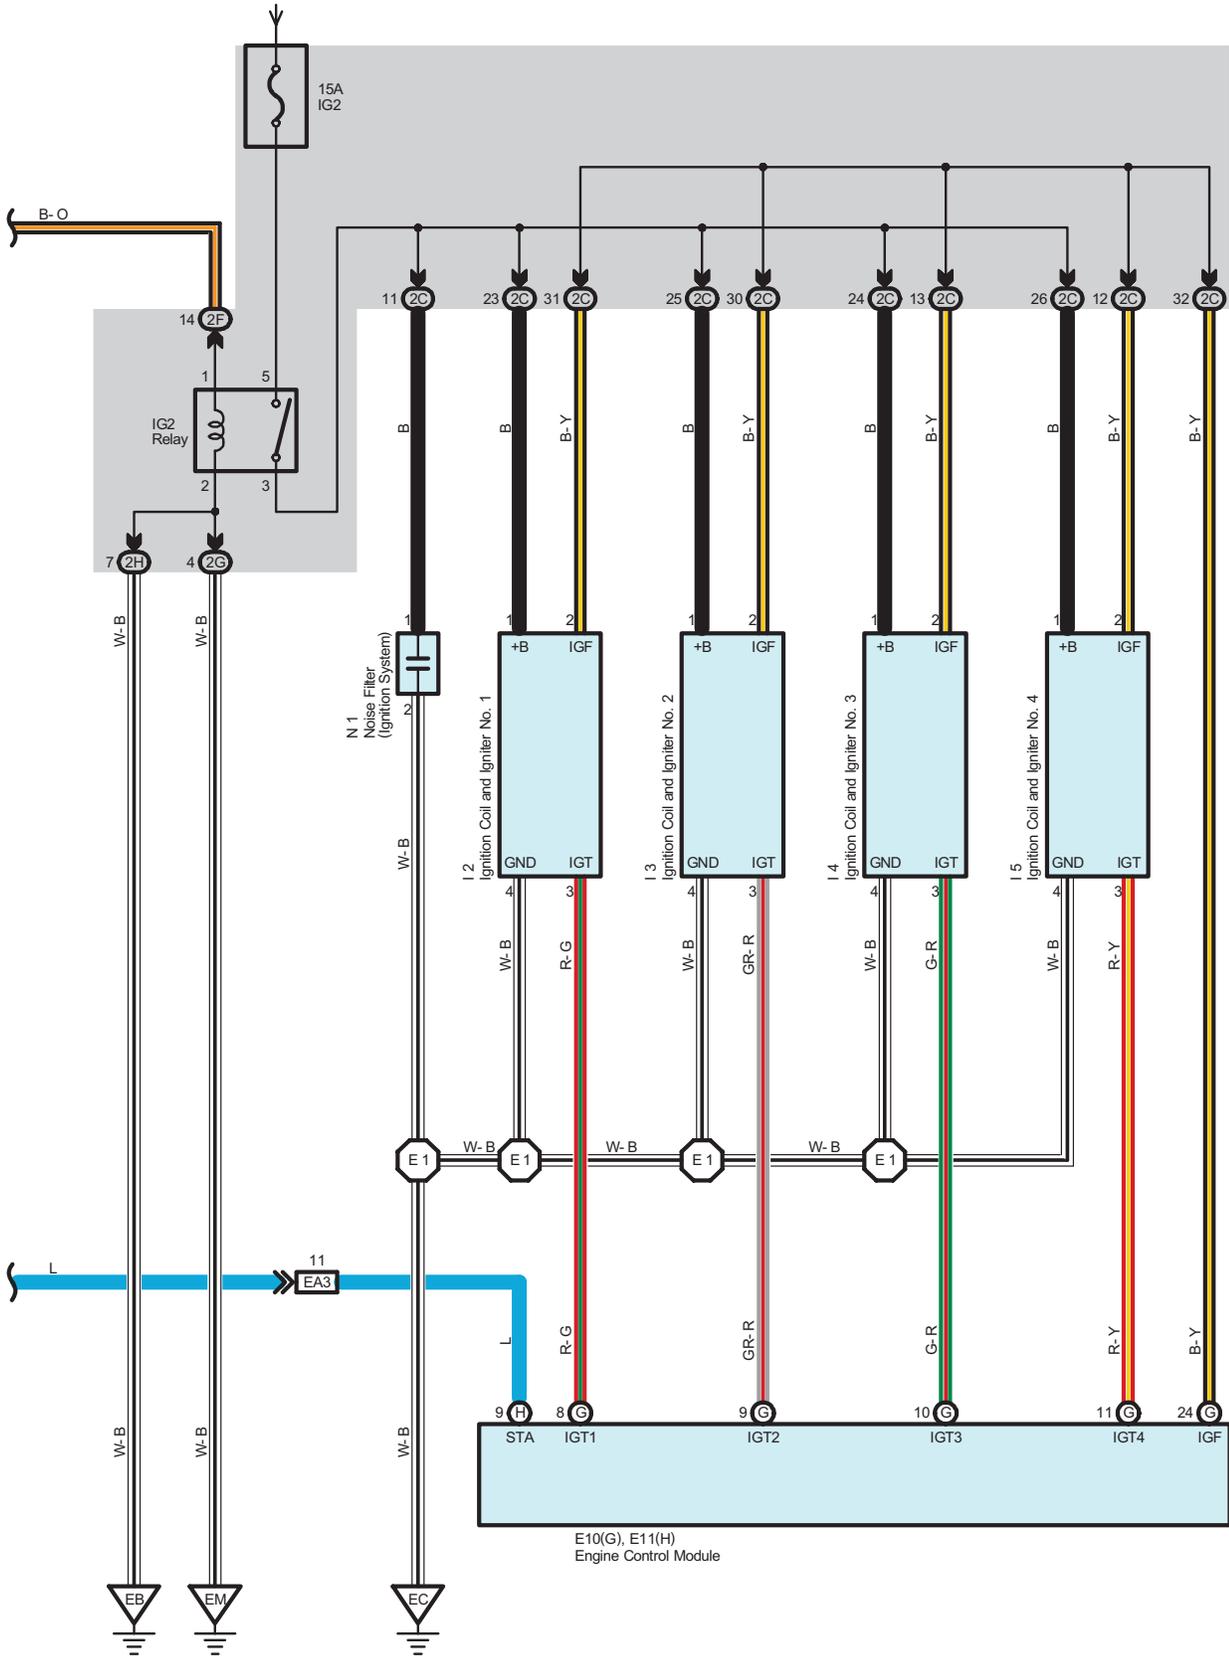

Starting and Ignition for 2ZZ-GE

Service Hints

I10 Ignition SW

- 5-6 : Closed with the ignition SW at ON or ST position
- 5-4 : Closed with the ignition SW at ST position

C11 Clutch Start SW (M/T)

- 1-2 : Closed with the clutch pedal fully depressed

ST Relay

- 5-3 : Closed with the clutch start SW on (M/T), Park/Neutral position SW on (A/T) and the ignition SW at ST position

S1 (A), S2 (B) Starter

- Points closed with the clutch start SW on and the ignition SW at ST position (M/T)
- Points closed with the Park/Neutral position SW at P or N position and the ignition SW at ST position (A/T)

P1 Park/Neutral Position SW (A/T)

- 6-9 : Closed with the A/T shift lever at P or N position

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
C11	36	I4	35 (2ZZ-GE)	N1	35 (2ZZ-GE)
E10	G 34 (2ZZ-GE)	I5	35 (2ZZ-GE)	P1	35 (2ZZ-GE)
E11	H 34 (2ZZ-GE)	I10	37	S1	A 35 (2ZZ-GE)
I2	35 (2ZZ-GE)	J3	37	S2	B 35 (2ZZ-GE)
I3	35 (2ZZ-GE)	J6	37		

: RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	26	Engine Room R/B No.1 (Engine Compartment Left)

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
IC	25	Engine Room Main Wire and Instrument Panel J/B (Instrument Panel Brace RH)
IK	25	Instrument Panel Wire and Instrument Panel J/B (Instrument Panel Brace RH)
2A	23	Engine Wire and Engine Room J/B (Engine Compartment Left)
2B		
2C		
2F	23	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2G		
2H		

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA1	42 (2ZZ-GE)	Engine Wire and Engine Room Main Wire (Inside of Engine Room R/B No.1)
EA3		
IC1	44	Instrument Panel Wire and Instrument Panel No.2 Wire (Instrument Panel Reinforcement LH)
IE1	44	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Brace LH)
IE4		

: GROUND POINTS

Code	See Page	Ground Points Location
EB	42 (2ZZ-GE)	Front Left Fender
EC	42 (2ZZ-GE)	Cylinder Head Cover LH
EM	42 (2ZZ-GE)	Front Left Fender
IE	44	Cowl Side Panel LH



: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E1	42 (2ZZ-GE)	Engine Room Main Wire			